



INSTRUCTIONS FOR USE

SELF-WINDING  
CHRONOGRAPH WATCHES

 
## INTRODUCTION

We congratulate you on having chosen a watch from the prestigious RAYMOND WEIL collection, the living expression of masterful design and of the continuous quest for top quality, which have been the hallmarks of the Brand since its creation.

Your watch is fitted with a RAYMOND WEIL self-winding chronograph movement calibre RW 7200 or 7300, hand-assembled by our master watchmakers according to the most rigorous quality standards of the Swiss watch industry.


In order to guarantee the perfect functioning of your RAYMOND WEIL watch for many long years, we thank you to pay close attention to the advice contained in these Instructions for Use as well as in the International Guarantee booklet.

## DESCRIPTION OF THE DIAL

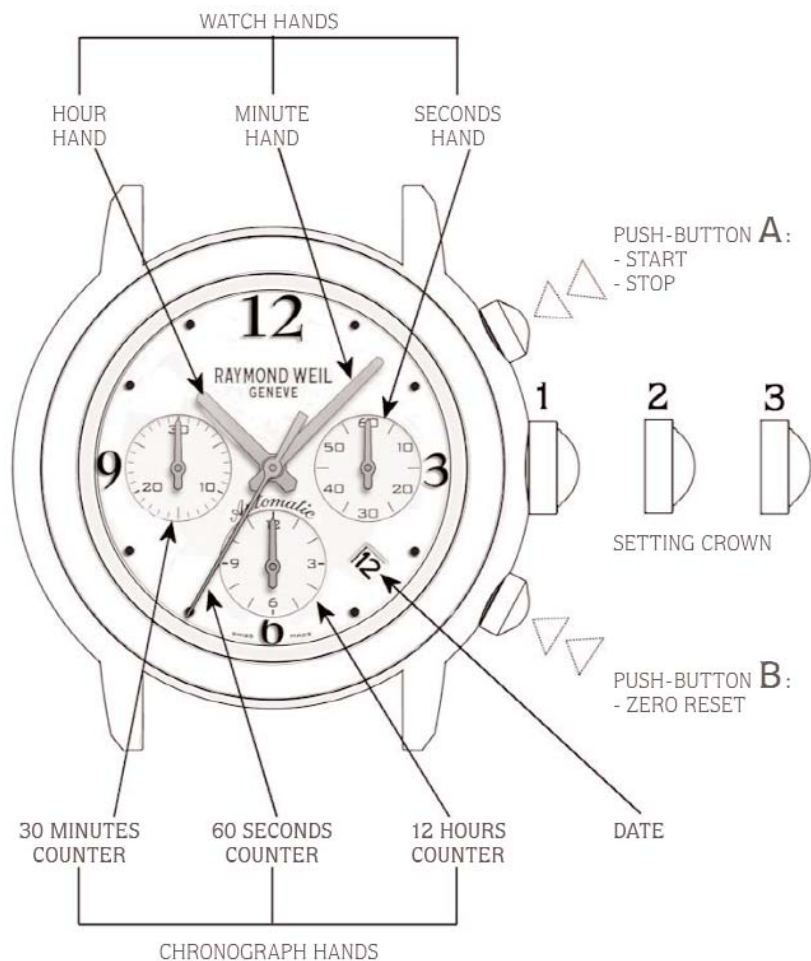

Certain RAYMOND WEIL chronographs are also equipped with a tachometric scale, enabling the measurement of speed in km/hr or other units.

## CHANGING THE DATE AND SETTING THE TIME

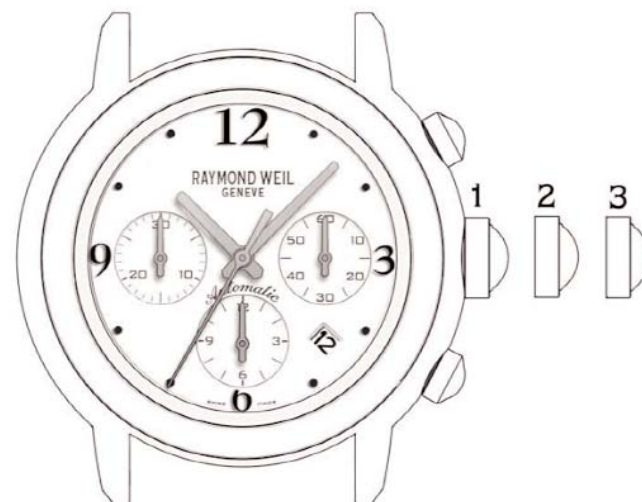 

- 1 Normal or winding position
- 2 Rapid date change
- 3 Time-setting

Your RAYMOND WEIL watch may be fitted with a screw-down crown. Before setting the time or changing the date, it is therefore necessary to unscrew the crown by pulling it straight out and turning it anti-clockwise. The crown will then be released by a spring. After completing all settings, press lightly on the crown, while turning it clockwise, and screw it back in gently in order to preserve your watch's water-resistance.

## CHANGING THE DATE

In order to adjust the date rapidly, pull the crown out to position 2. Then, depending on the model of your watch, turn the crown forwards or backwards until the desired date appears in the window located at:

- 12 o'clock for models fitted with an RW 7200 calibre;
- 4 o'clock for models fitted with an RW 7300 calibre.

The date changes as the hour hand passes midnight. During this operation, your watch will continue to function and so will not need to be reset.

Do not change the date when the watch is showing a time between 10 pm and 2 am. The watch's automatic date change mechanism engages during this time period and the movement could be damaged.

After finishing your changes, always push the crown back in to position 1, in order to preserve your watch's water-resistance.

 
## SETTING THE TIME

In order to adjust the time, pull the crown out to position 3 and turn it forwards or backwards until the hands indicate the desired time.

After setting the time, always push the crown back in to position 1, in order to restart the hands and to preserve your watch's water-resistance.

## USE OF THE CHRONOGRAPH

The chronograph function can only be used when the crown is in position 1 or 2.

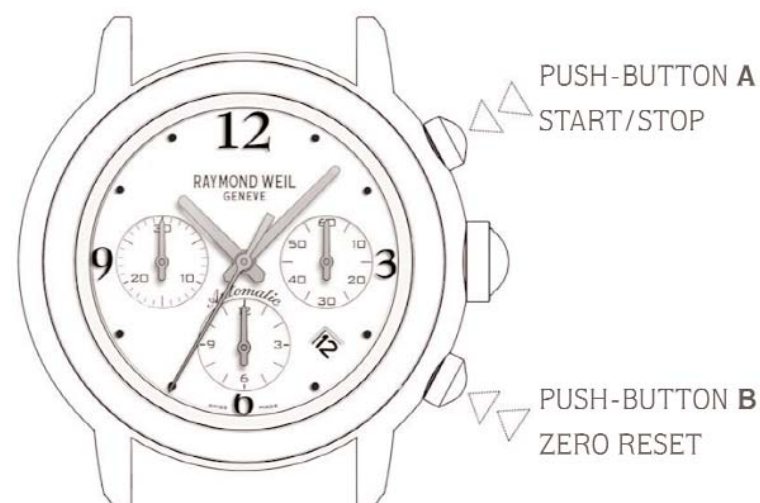

## START

Press push-button A to activate the seconds hand of the chronograph. If the timed activity lasts longer than 60 seconds, the time elapsed will next appear on the minutes counter and after a further 30 minutes on the hours counter.

## **STOP**

Press push-button A a second time to stop the chronograph and obtain the time that has elapsed (in hours, minutes and seconds). By pressing push-button A again, timing restarts immediately. Thus you can measure several consecutive time-durations.

## **RESETTING TO ZERO**

Press push-button B in order to reset all the chronograph counters to zero. Your watch is now ready to start timing again. Resetting to zero is only possible once the chronograph has been stopped.

### **RAYMOND WEIL S.A.**

Avenue Eugène-Lance 36–38

P.O. Box 1569

1211 Geneva 26

Switzerland

Tel: +41 (0) 22 884 00 55

Fax: +41 (0) 22 884 00 50



### **GENERAL INFORMATION**

[info@raymond-weil.ch](mailto:info@raymond-weil.ch)

### **AFTER-SALES SERVICE**

[customer-service@raymond-weil.ch](mailto:customer-service@raymond-weil.ch)

### **WEBSITE**

[www.raymond-weil.com](http://www.raymond-weil.com)