

INDEX

English	page
Guarantee	1-2
Operating Instructions	3-14
<hr/>	
Deutsch	Seite
Garantie	15-16
Bedienungsanleitung	17-28
<hr/>	
Español	página
Garantía	29-30
Instrucciones	31-42
<hr/>	
Français	page
Garantie	43-44
manuel d'utilisation	45-56
<hr/>	
Italiano	pagina
Garanzia	57-58
Istruzione per l'uso	59-70

CERTIFICATE

JL
JACQUES LEMANS
SPORTS

F1
Formula 1™

Guarantee - Jacques Lemans

Only the very best materials are used for the manufacture of Jacques Lemans watches, and they are made to the highest manufacturing standards.

Each watch is individually tested and quality controlled, prior to delivery.

This is why it is possible to provide a two year guarantee covering all fabrication defects.

In the case of any malfunctions caused by a manufacturing defect or faulty parts, which may occur within two years of original purchase, our guarantee will entitle you a free repair, or at the option of manufacturer an exchange for a new watch.

In order to make a claim under the manufacturing guarantee, the following prerequisites must be fulfilled:

- the manufacturer must be informed of the defect without delay
- a claim can only be made through an authorized Jacques Lemans dealer, the regional wholesaler or Jacques Lemans direct.
- The guarantee is only valid in connection with a fully completed guarantee card, which has been duly filled in and signed by a specialized dealer. Proof of the date of purchase, the number of the watch and the dealer's stamp must be provided.

Components not covered by this manufacturing guarantee are the watch glass, the leather watch strap and the battery. Damages caused by tempering, misuse or wilful damage are not covered. Such damage includes vigorous impact, extrem heat or cold, powerful magnetic fields or by exceeding normal atmospheric conditions.

The imperviousness to water is guaranteed for a period of two years as from the date of purchase provided the watch glass, the sealing ring, the case-back and the crown remain undamaged.

This warranty is automatically rendered null and void if watch is repaired, serviced or tempered with by persons who are not an authorised dealer.

Exclusion of liability for consequential damages:


Jacques Lemans or authorized dealers shall not be held liable under any circumstances for individual, consequential or secondary damages of any kind, even if Jacques Lemans has been informed. This guarantee is expressly limited to the purchase price of the watch.

Worldtimer

F5008


1. Normal Mode Operation: Date, Day & 24 Time Zones

- Rotate SI to enter the Modes (←Up;→Down)
- The display sequence:

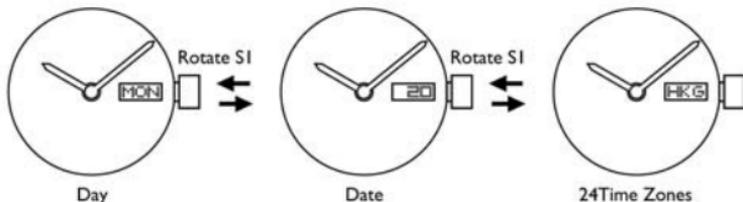


2. Normal Mode

- Press and hold SI for 3 seconds to enter the setting mode, Hour flashing.
- Press SI to select the setting items.
- Rotate SI in clockwise or anti-clockwise for decreasing or increasing in digit.
- Press SI to confirm, and return to the Day Mode.

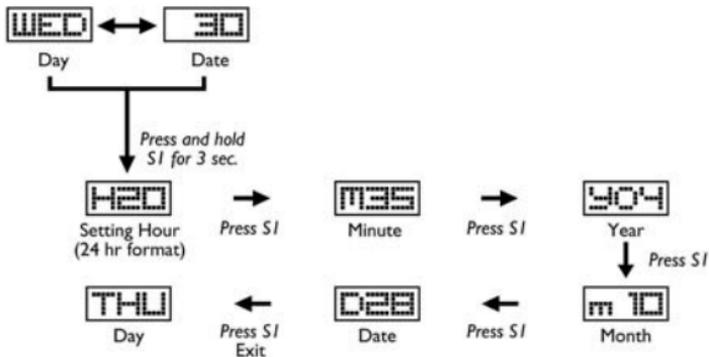

3. World Time Mode

- Rotate SI upwards to enter the World Time Mode in the Day Mode.
- Press and hold SI for 3 seconds to enter the setting, the Time Zones flashing.
- Rotate SI to select 24 Time Zones. (Scroll from top to bottom).
- Press SI to confirm and then the Hour, Minute and Date & Day adjust automatically.
- You can select the daylight saving time when the 24 time zones is flashing after confirmed. Rotate upwards SI once and press SI to enter the DST "Yes" mode and advance 1 hour forward. Rotate upwards SI twice to enter the DST "NO" mode, press SI exit DST setting mode.

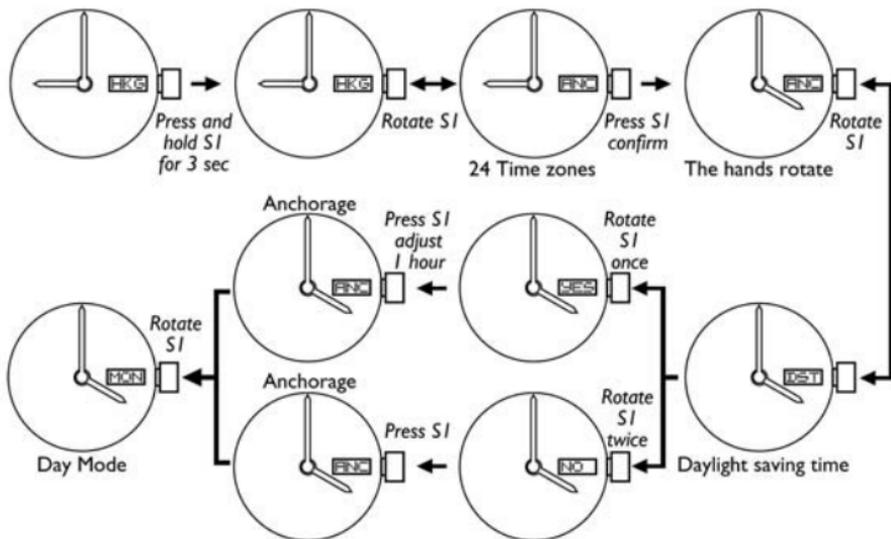

24 TIME ZONES DESCRIPTION

Time Zone	City Code	City Name	Time
1	SAM	Samoa	1:00
2	HNL	Honolulu	2:00
3	ANC	Anchorage	3:00
4	LAX	Los Angeles	4:00
5	DEN	Denver	5:00
6	CHI	Chicago	6:00
7	NYC	New York	7:00
8	CCS	Caracas	8:00
9	RIO	Rio De Janeiro	9:00
10	REC	Recife	10:00
11	AZO	Azores	11:00
12	LON	London	12:00

Time Zone	City Code	City Name	Time
13	PAR	Paris	12:00
14	CAI	Cairo	14:00
15	MCW	Moscow	15:00
16	DXB	Dubai	16:00
17	KHI	Karachi	17:00
18	DAC	Dacca	18:00
19	BKK	Bangkok	19:00
20	HKG	Hong Kong	20:00
21	TYO	Tokyo	21:00
22	SYD	Sydney	22:00
23	NOU	Noumea	23:00
24	WLG	Wellington	0:00

4. EL Back Light

Press S1 to activate the EL back light for 3 seconds.

Garantie Jacques Lemans

Zur Herstellung der Jacques Lemans Uhren werden nur die besten Materialien verwendet und nach den hochwertigsten Herstellungsnormen angefertigt.

Vor der Auslieferung wird jede Uhr auf Ihre Funktion und Qualität hin einzeln überprüft.

Nur dadurch ist es uns möglich, eine Garantie von zwei Jahren zu gewähren, die sich auf alle Funktionsmängel bezieht.

Sollten binnen 2 Jahren Fabrikationsmängel auftreten, gibt Ihnen diese Garantie das Recht auf kostenlose Reparatur oder Umtausch der erworbenen Uhr.

Die Entscheidung, ob diese Uhr repariert oder umgetauscht wird, liegt im Ermessen des Herstellers.

Damit diese Herstellergarantie in Anspruch genommen werden kann, müssen folgende Voraussetzungen erfüllt werden:

- Der Mangel muss dem Hersteller unverzüglich mitgeteilt werden.
- Der Mangel kann nur bei einem autorisierten Jacques Lemans Fachhändler, oder dem regionalen Großhändler oder direkt bei Jacques Lemans geltend gemacht werden.
- Die Garantie ist nur gültig in Zusammenhang mit einer vollständig ausgefüllten Garantiekarte, welche vom Fachhändler ordnungsgemäß ausgefüllt und unterschrieben worden ist. Kaufdatum, Uhrennummer und Händlerstempel sind nachzuweisen.

Von dieser Herstellergarantie ausgenommene Teile sind Uhrenglas, Lederband und Batterie, so wie Schäden, die durch unsachgemäße Anwendung der Uhr entstehen.

Solche Schäden können sein: starke Stöße, extreme Hitze bzw. Kälte, starke Magnetfelder und Überschreitung der vorgeschriebenen Atmosphären.

Die Wasserdichtigkeit ist für den Zeitraum von zwei Jahren ab dem Kaufdatum garantiert, sofern Uhrenglas, Glasreifen, Deckelboden und Krone unbeschädigt sind.

Die Herstellergarantie erlischt, wenn nicht autorisierte Personen Reparaturen oder Wartungsarbeiten an der Uhr durchführen.

Es besteht Haftungsausschluss für Folgeschäden:


Jacques Lemans oder die autorisierten Fachhändler haften unter keinen Umständen für Einzel-, Folge-, oder Nebenschäden jeglicher Art, auch wenn Jacques Lemans davon in Kenntnis gesetzt wurde. Diese Garantie beschränkt sich ausdrücklich auf den Kaufpreis der Uhr.

Worldtimer

F5008


1. Normalzeit-Modus Betrieb: Datum, Wochentag, & 24 Weltzeitzonen

- Drehen Sie SI, um die verschiedenen Modi aufzurufen. (←Aufwärts; →Abwärts)
- Die Anzeigesequenz ist wie folgt:

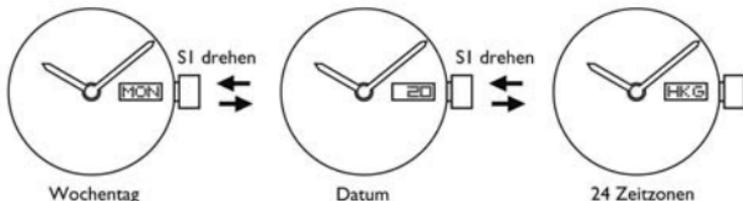

2. Normalzeit-Modus

- Halten Sie SI ca. 3 Sekunden gedrückt, um den Einstellmodus aufzurufen; die Stundenanzeige blinkt.
- Betätigen Sie SI, um die Anzeigestellen für die Einstellung auszuwählen.
- Drehen Sie SI im oder gegen den Uhrzeigersinn, um die Anzeige aufwärts oder abwärts einzustellen.
- Betätigen Sie SI, um die Einstellungen zu bestätigen, und um in den Wochentagmodus zurück zu schalten.

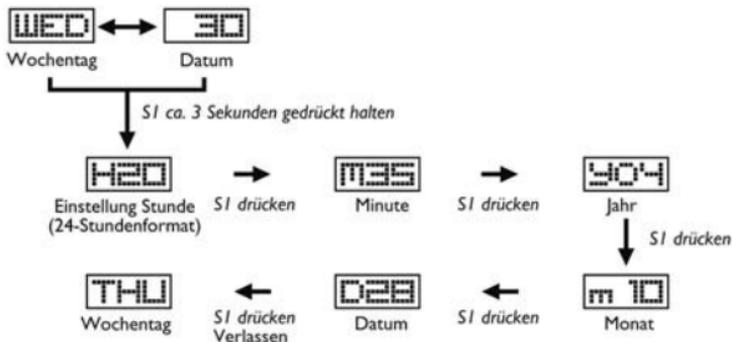

24 ZEITZONEN BESCHREIBUNG

Zeitzone	Stadt Abkürzung	Stadt Bezeichnung	Zeit
1	SAM	Samoa	1:00
2	HNL	Honolulu	2:00
3	ANC	Anchorage	3:00
4	LAX	Los Angeles	4:00
5	DEN	Denver	5:00
6	CHI	Chicago	6:00
7	NYC	New York	7:00
8	CCS	Caracas	8:00
9	RIO	Rio De Janeiro	9:00
10	REC	Recife	10:00
11	AZO	Azores	11:00
12	LON	London	12:00

Zeitzone	Stadt Abkürzung	Stadt Bezeichnung	Zeit
13	PAR	Paris	12:00
14	CAI	Cairo	14:00
15	MCW	Moscow	15:00
16	DXB	Dubai	16:00
17	KHI	Karachi	17:00
18	DAC	Dacca	18:00
19	BKK	Bangkok	19:00
20	HKG	Hong Kong	20:00
21	TYO	Tokyo	21:00
22	SYD	Sydney	22:00
23	NOU	Noumea	23:00
24	WLG	Wellington	0:00

4. EL-Anzeigebeleuchtung

Betätigen Sie S1, um die EL-Anzeigebeleuchtung 3 Sekunden lang einzuschalten.



International Warranty

Model-number/Modelnummer
número del modelo/número de modèle
numero del modello:

Purchase Date/Kaufdatum
fecha de compra/date d'achat
data d'acquisto:

Dealer/Verkäufer/vendedor/vendeur/venditore: